



PEPLYN TF filters have been specifically designed to protect wine from residual particulate which can remain following primary clarification processes. By combining absolute particle retention, high dirt holding capacity and resistance to blockage with ease of regeneration, PEPLYN TF filters provide the optimum solution for trap filtration.

The carefully constructed polypropylene media ensures insoluble particulate is captured on the surface of the filtration media and in a way that it can be easily removed through backwashing. This feature, combined with the strong, rigid construction provides reliable filtration performance over extended operational lifetimes.


Features

- Robust polypropylene construction designed for chemical CIP and backwash
- High effective filtration area
- A range of absolute retention ratings

Benefits


- Extended service life when combined with regular CIP regeneration
- High wine flow and resistance to blockage under high loading
- Defined cut off to powders and flexibility to optimize

Performance Characteristics

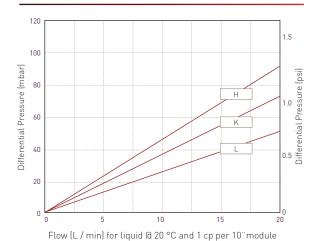

Recommended wine flow rate 10 - 15 L / min / 10" module

Filtration Stage

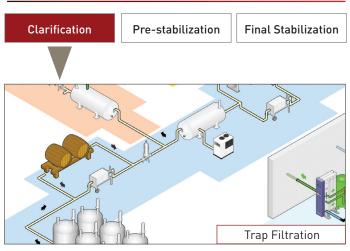

PEPLYN TF WINE



Specifications

Materials of Construction

■ Filtration Media: Polypropylene Upstream Support: Polypropylene ■ Downstream Support: Polypropylene ■ Inner Support Core: Polypropylene Outer Protection Cage: Polypropylene ■ End Caps: Polypropylene ■ End Cap Insert: 316L Stainless Steel ■ Standard o-rings: Silicone

Food Contact Compliance

Materials conform to the relevant requirements of FDA 21CFR Part 177, current EC1935 / 2004 and current USP Plastics Class VI - 121 °C and ISO10993 equivalents.

Recommended Operating Conditions

Up to 70 °C (158 °F) continuous operating temperature and higher short-term temperatures during CIP to the following limits:

Temperature		Max Forward dP		
°C	°F	(bar)	(psi)	
20	68	5.0	72.5	
40	104	4.0	58.0	
60	140	3.0	43.5	
80	176	2.0	29.0	
90	194	1.0	14.5	
>100 (steam)	>212 (steam)	0.3	4.0	

Effective Filtration Area (EFA)

10" (250 mm) Up to 0.7 m² (7.53 ft²)

Cleaning and Sterilization

PEPLYN TF cartridges can be repeatedly steam sterilized in situ or autoclaved up to 135 °C (275 °F). They can be sanitized with hot water up to 90 °C (194 °F), are compatible with a wide range of chemicals and can be backwashed. Please refer to our Clean in Place Support Guide or contact your local Parker representative for more information.

Retention Characteristics


The retention characteristics of PEPLYN TF filter cartridges have been determined by a single-pass technique using suspensions of ISO 12103 Pt. 1 A2 Fine and A4 Course test dust in water.

	Micron Rating at various efficiencies									
E	Efficiency	>99.99%	99.98%	99.90%	99%	95%	90%			
E	Beta Ratio	10000	5000	1000	100	20	10			
ŀ	+	5.00	4.70	4.50	3.50	2.30	1.00			
ŀ	<	10.00	8.00	7.00	4.80	3.80	2.80			
L	=	15.00	12.00	10.00	7.20	6.00	4.50			

Manufacturing Traceability

Each filter cartridge displays the product name, product code and lot number. Additionally, each module displays a unique serial number providing full manufacturing traceability.

Ordering Information

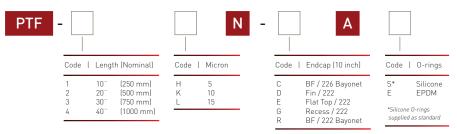

VSH & HSL range of Sanitary Beverage Housings



- Multi and single elements
- Designed specifically for the food & beverage industry
- 0.4μM Ra internal, 0.25μM Ra external
- High quality crevice free construction
- Available for up to 30 round filters
- Sanitary vent, tri-clamp connections as standard
- Sanitary body closure as standard