BEVPOR MS BOTTLED WATER

Filter Cartridges





BEVPOR MS filters provide full retention to industry regulated, water contaminating organisms to ensure the micro-biological safety of bottled water.

The inert and highly asymmetric PES membrane provides validated microbial retention to regulated, contaminating organisms. The 0.2µm grade provides complete sterility in accordance to ASTM F838-05 requirements. Combined with hydrophilic properties for easy integrity testing, BEVPOR MS filters provide assured performance throughout their service life

BEVPOR MS filters have been designed to provide a cost effective solution to the microbial sterilization and stabilization of bottled water by providing increased process control with increased operational efficiency.


Features

- Validated retention to industry regulated organisms
- Inert materials of construction
- Easily integrity tested in situ

Benefits


- Ensures the safety of the water prior to bottling
- Protects the purity and essential characteristics of the source water
- Assures performance of the filtration

Performance Characteristics

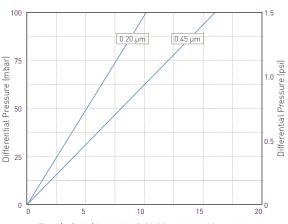

Flow (L / min) for liquid @ 20 °C and 1 cp 10" module Recommended water flow rate of 10l/min/10" module

Filtration Stage

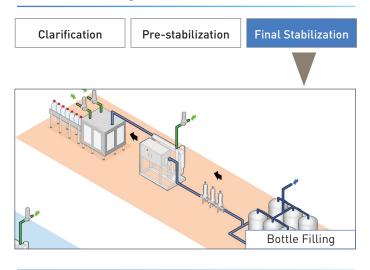

BEVPOR MS BOTTLED WATER



Specifications

Materials of Construction

Filtration Membrane:
Upstream Support:
Downstream Support:
Inner Support Core:
Outer Protection Cage:
End Caps:
End Cap Insert:
Polyester
Polyester
Polypropylene
Polypropylene
Nylon
316L Stainless Steel

Food Contact Compliance

■ Standard o-rings:

Materials conform to the relevant requirements of 21CFR Part 177, current EC1935 / 2004 and current USP Plastics Class VI - 121 °C and ISO10993 equivalents.

Silicone /EPDM

Recommended Operating Conditions

Up to 70 °C (158 °F) continuous operating temperature and higher short-term temperatures during CIP to the following limits:

Temperature		Max Forward dP	
°C	°F	(bar)	(psi)
20	68	5.0	72.5
40	104	4.0	58.0
60	140	3.0	43.5
80	176	2.0	29.0
90	194	1.0	14.5
>100 (steam)	>212 (steam)	0.3	4.0

Effective Filtration Area (EFA)

10" (250 mm) Up to 0.6 m² (6.45 ft²)

Cleaning and Sterilization

BEVPOR MS cartridges can be repeatedly steam sterilized in situ or autoclaved at up to 130 °C (266 °F). They can be sanitized with hot water at up to 90 °C (194 °F) and are compatible with a wide range of chemicals. Please refer to our Clean in Place support guide or contact your local Parker representative for more information.

Retention Characteristics

0.2µm BEVPOR MS filters have been validated to provide sterile effluent after bacterial challenge testing following ASTM F838-05 methodology on 10" cartridges with more than 10⁷cfu per cm² using *Brevundimonas diminuta*.

In addition, challenges with the following EU regulated organisms have been performed.

Organism	LRV when challenged with a minimum of 10 ⁷ cfu per cm ²		
		0.20	0.45
Serratia marcescens		FR	FR
Escherichia coli		FR	FR
Enterococcus faecalis		FR	FR
Clostridium perfringens		FR	FR
Pseudomonas aeruginosa		FR	FR
Brevundimonas diminuta		FR	5
FR - Fully retentive dur	ring challenge	٥	

Integrity Test Data


All filters are flushed with pharmaceutical grade purified water prior to despatch. They are integrity tested to the following limits:

Diffusional Flow	Micro	n Rating
Test Parameters	0.20	0.45
Test Pressure (barg)	2.4	1.7
Test Pressure (psig)	40.6	25.0
Max Diffusional Flow per 10" (ml /min)	16.0	16.0

Manufacturing Traceability

Each filter element displays the product description, product code and lot number. Additionally each filter module displays a unique serial number providing full manufacturing traceability.

Ordering Information

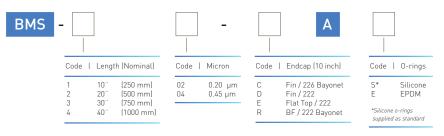

VSH & HSL range of Sanitary Beverage Housings



- Multi and single elements
- Designed specifically for the food and beverage industry
- 0.4µM Ra internal, 0.25µM Ra external
- High quality crevice free construction
- Available for up to 30 round filters
- Sanitary vent, tri-clamp connections as standard
- Sanitary body closure as standard